

HELLOMOTO

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola C261 wireless phone.

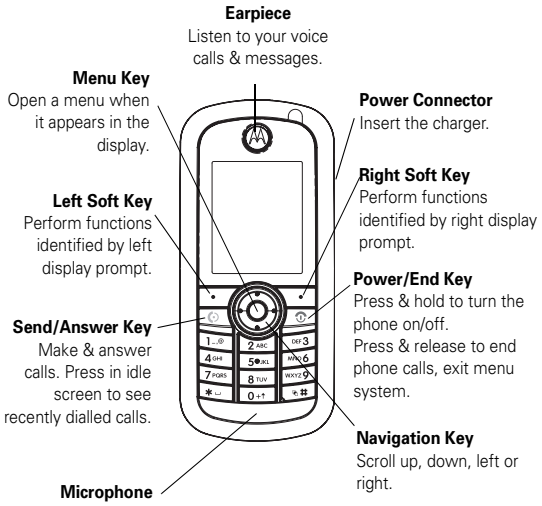

check it out!

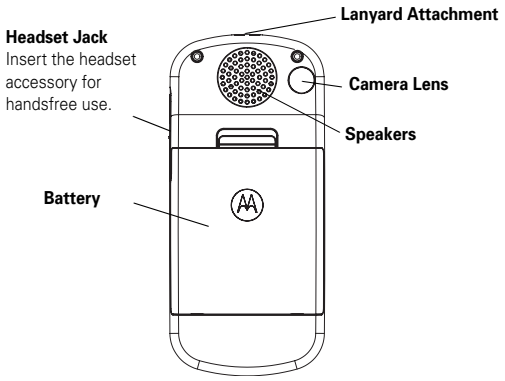

Note: Your phone may not appear exactly as the phone image above.

www.motorola.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2005.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at http://www.motorola.com.

feature locator

main menu

- **Phonebook**
- **Recent Calls**
  - Received Calls
  - Dialled Calls
  - NotePad
  - Call Times
  - Call Cost
- **Message**
  - Create
  - Inbox
  - Draft
  - Outbox
  - Quick Notes
  - Voicemail
  - Browser Msgs
  - Info Services
  - MMS Templates
- **Office Tools**
  - Calculator
  - MyMenu
  - Alarm Clock
  - Stop Watch
  - Chat
  - Dialling Services
  - IM
- **Games & Apps**
  - STK Applications
- **WebAccess**
  - Start Browser
  - Web Shortcut
  - Go to URL
  - Browser Setting
  - Stored Pages
  - History
  - General Setting
- **Multimedia**
  - Camera
  - Pictures
  - Sounds
- **Personalise**
  - Home Screen
  - Main Menu
  - Colour Setting
  - Greeting
  - Wallpaper
  - Screen Saver
  - Quick Dial
- **Settings**
  - (see next page)

Note: The **STK Applications** depends on your carrier's SIM card. You may not see this function. **Chat**, **IM** and **Quick Dial** depend on your carrier's settings. You may not see these features in your phone.

settings menu

- **Ring Style**
  - Style
  - Detail
- **Call Divert**
  - Voice Calls
  - Fax Calls
  - Data Calls
  - Cancel All
  - Forward Status
- **In Call Setup**
  - In-Call Timer
  - Call Cost Setup
  - My Caller ID
  - Answer Options
  - Call Waiting
- **Initial Setup**
  - Time and Date
  - 1-Touch Dial
  - Display Settings
  - Backlight
  - Scroll
  - Language
  - Contrast
  - DTMF
  - Master Reset
  - Master Clear
- **Phone Status**
  - My Numbers
  - Active Line
  - Battery Meter
- **Headset**
  - Auto Answer
- **Network**
  - New Network
  - Network Setup
  - Avail. Networks
  - My Network List
  - Service Tone
  - Call Drop Tone
  - Band Selection
- **Security**
  - Phone Lock
  - Lock Keypad
  - Auto Key Lock
  - Fixed Dial
  - Call Barring
  - SIM PIN
  - New Passwords

Note: The **Active Line** function, **My Network List**, **Service Tone** and **Band Selection** depend on your carrier's settings. You may not see these features in your phone.

contents

check it out! **2**
feature locator **4**
Safety Information **9**
EU Conformance **17**
Recycling Information **18**
essentials **19**
about this guide 19
SIM card 20
battery 20
turn it on & off 23
make a call 23
answer a call 23
your phone number 24
main attractions **25**
multimedia messages 25
camera 27
using instant messaging 29

basics **34**
display 34
menus 37
text entry 39
volume 42
navigation key 43
handsfree speaker 43
codes & passwords 43
lock & unlock phone 44
check battery meter 44
customise **45**
ring style 45
time & date 46
time, date, date format and NITZ setup 46
wallpaper 46
screen saver 47
display appearance 47
answer options 48
personal greetings 48
optional handsfree operation 49

calls **50**
recent calls 50
redial 51
return a call 51
notepad 52
hold or mute a call 52
call waiting 52
caller ID 53
emergency calls 53
international calls 54
1-touch dial 54
voicemail 55
inserting special characters into dialling sequences . . . 56
other features **57**
advanced calling 57
phonebook 59
messages 62
instant messaging 64
chat 65
personalising 65
call times & costs 68
handsfree operation 69
network 69
personal organiser 70
security 71
fun & games 71
SAR data **72**

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.[1]

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions.

External Antenna Care

If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline phone.

Body-Worn Operation: Voice Communication

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting voice communications, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines.

If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 2.5 centimetres (1 inch) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 2.5 centimetres (1 inch) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at `www.motorola.com`.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

Turn off your wireless device whenever instructed to do so by airline staff. If your device offers a flight mode or similar feature, consult airline staff about use in flight. If your device offers a feature that automatically turns on the phone, then turn off this feature before boarding an aeroplane or entering an area where the use of wireless devices is restricted.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 centimetres (6 inches) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 15 centimetres (6 inches) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road. Using a phone may be distracting in certain circumstances. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices can be found in the "Wireless Phone Safety Tips" at the end of this guide and/or at the Motorola website: `www.motorola.com/callsmart`.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Gas or Petrol Stations

Obey all posted signs with respect to the use of radio equipment in gas or petrol stations. Turn off your wireless device if instructed by authorised staff.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Damaged Products

If your phone or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorised Service Centre to determine if it has been damaged. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become hot. Take care when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Choking Hazards

Your phone or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your phone and its accessories away from small children.

Glass parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:


- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

1. The information provided in this document supersedes the general safety information in user's guides published prior to January 28, 2005.

European Union Directives Conformance Statement

CE Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

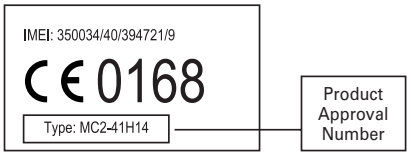

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose the product with household waste.

Recycling Mobile Phones and Accessories

Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

essentials

about this guide

This guide shows how to locate a menu feature as follows:

Find it: Press ☰ > **Recent Calls** > **Dialled Calls**

Find it: This example shows that, from the home screen, you press ☰ to open the menu, highlight and select **Recent Calls**, then highlight and select **Dialled Calls**.


Find it: Press ·◎· to scroll to and highlight a menu feature. Press the **Select** key to select the highlighted menu feature.

symbols	
(A)	This means a feature depends on the network or subscription and may not be available in all areas. Contact your service provider for more information.
(H)	This means a feature requires an optional accessory.

SIM card


Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.

Caution: Do not bend or scratch your SIM card. Keep it away from static electricity, water and dirt.

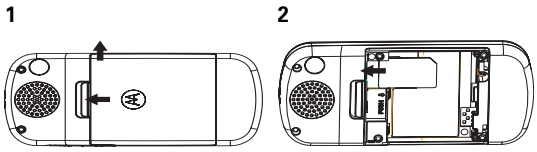

battery

battery installation

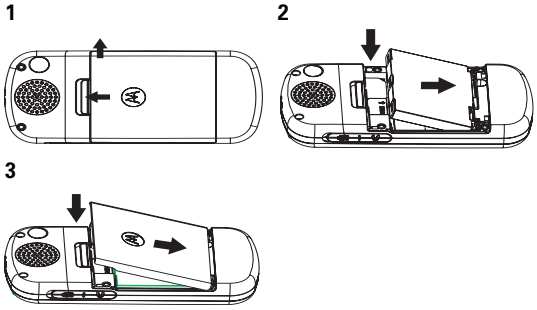

Note: If you remove the battery for a long time, the phone will ask you to reset the time and date. If you choose to cancel or ignore, the time and date will be affected. You can input the correct time and date by:

Find it: Press ☰ > **Settings** > **Initial Setup** > **Time and Date**

But, if you remove the battery just for a few seconds (e.g., quickly change SIM card), the system either won't ask you to reset the time and date or if prompted, you can choose **BACK** on the time and date screen, the clock will only be slightly affected.

battery charging

Before you can use your phone you need to completely charge the battery. New batteries are not fully charged. Plug the travel charger into your phone and an electrical outlet. Your phone displays **Charge Complete** when finished.



Power Connector
Insert the charger.

Tip: You cannot overcharge your battery. It will perform best after you fully charge and discharge it a few times.

New batteries are shipped partially charged. Before you can use your phone, install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

battery tips

Battery life depends on the network, signal strength, temperature, features and accessories you use.

- Always use Motorola Original™ batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Contact your local recycling centre for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the "Safety and General Information" section included in the grey-edged pages at the back of this guide.

turn it on & off



To turn on your phone, press and hold ⏻ for 2 seconds. If prompted, enter your SIM card PIN code and/or unlock code.

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**. Contact your service provider.

To turn off your phone, press and hold ⏻ for 2 seconds.

make a call

Enter a phone number and press ✆ to make a call.

To end the call, press ⏻.

answer a call

When your phone rings and/or vibrates, press ✆ to answer.

To end the call, press ⏻.

your phone number

To see your number:

Press ☰ > **Settings** > **Phone Status** > **My Numbers**

To store or edit your name and number on your SIM card, press the **View** key while displaying it. If you don't know your phone number, contact your service provider.

multimedia messages

For more message features, see page 62.

send a multimedia message

A *Multimedia Messaging Service* (MMS) message contains pages with text and media objects (including photos, pictures, animations or sounds). You can send the multimedia message to other phones with MMS and to email addresses.

Find it: Press ☰ > **Messages** > **Create** > **MMS** or **MMS Templates**

Note: The MMS templates can't be downloaded or expanded. You can only use the default templates.

1 Press keypad keys to enter text on the page (for details about text entry, see page 39).

To insert a **picture, sound or other object** on the page, press the **INSERT** key or ☰ > **Insert**. Select the file type and the file.

To insert another slide in the message, enter text or objects on the current page and press ☰ > **Insert** > **Add Slide**. You can enter more text and objects on the new page.

2 When you finish the message, press the **OK** key.

3 Choose one or more people for **SEND TO**.

To select a **phonebook entry**, highlight the entry and press the **ADD** key. Repeat to add other phonebook entries.

To **enter** a new number, highlight **[One Time Entry]** and press the **Select** key.

To **enter and store** a new number, highlight **[New Entry]** and press the **Select** key.

4 When you finish entering numbers/addresses, press the **DONE** key. Your phone displays the message fields.

To enter a **subject** for the message, highlight **Subject** and press the **CHANGE** key.

To request a **delivery receipt** for the message, highlight **Receipt** and press the **CHANGE** key. Then press the **Select** key.

5 To **send** the message, press **SEND** key.

To **cancel or save** the message as a **Draft**, press ☰.

receive a multimedia message

When you receive a multimedia message or letter, your phone plays an alert and displays **New Message** with a message indicator such as ✉.

Press the **READ** key to open the message.

If a multimedia message contains media objects:


- Photos, pictures and animations display as you read the message.
- A sound file plays when its slide bar displays.

camera

To activate your phone's camera using the menu system:

Find it: Press ☰ > **Multimedia** > **Camera**

The active viewfinder image appears on your display.

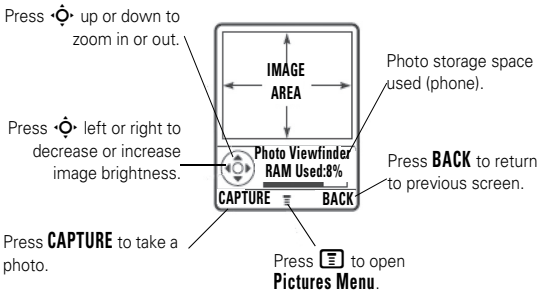

Point the camera lens at the photo subject, then:

1 Press **CAPTURE** to take a photo.

2 Press **STORE** to view storage options.

3 Press **DISCARD** to delete the photo and return to active viewfinder. If you choose to keep the photo, continue to step 4.

4 Press ·◎· to scroll to **Send In Message**, **Store Only**, **Apply as Wallpaper** or **Apply as Screen Saver**.

From the active viewfinder, you can press ☰ to enter the **Pictures Menu**:

option
Go To Pictures Go to the picture library.
Auto-Timed Capture Set the camera to take a photo automatically after counting down 5 or 10 seconds.
Picture Setup Adjust the picture settings. The settings include **Auto Repeat**, **Shuffle**, **Lighting Conditions**, **Special Effect**, **Exposure**, **Resolution**, **Shutter Tone**, **Image Quality** and **Flicker**.
Available memory Check used and available memory.

After **CAPTURE**, you can choose how to store your picture. Options are listed below.

option
Send In Message If you choose this option, an MMS message will be initiated with the captured picture. You can edit the MMS message and send it with captured picture.
Store Only If you choose this option, the captured picture will be stored in **Pictures**.
Apply as Wallpaper If you choose this option, your picture will be applied as wallpaper.
Apply as Screen Saver If you choose this option, your picture will be applied as the screen saver.

using instant messaging

Use *instant messaging (IM)* to exchange messages in real time with other wireless phone users. The messages you send display immediately on the other users' phones.

logging in to IM

Find it: Press ☰ > **Office Tools** > **IM** > **Sign On**

1 Press keypad keys to enter your **IM ID**.

2 Press **OK** to submit your **IM ID**.

3 Press keypad keys to enter your **Password** (case-sensitive).

4 Press **OK** to submit your **Password**.

Tip: To log in automatically next time, scroll to **Offline Settings** > **Auto Login** after you submit your password.

5 Press ·◎· to scroll to your **Contact List**.

6 Press **Select** to view the **Contact List**.

Your **Contact List** is sorted by online status:

- **Conversations** display first. These are online IM users having active conversations with you. Press **View** to open your conversation with them.
- **Online Contacts** are logged in to IM. Press **SEND IM** to send the person a message. A (busy) indicator shows that someone is busy and unable to respond.
- **Offline Contacts** are logged out of IM. You can press **SEND IM** to send a message, in case the person has logged in since you refreshed your list.

  Note: To refresh your **Contact List**, press ☰ > **Refresh List** while viewing the list.

sending and receiving instant messages

When you log in to IM, you can exchange messages with other IM users.

1 Press ·◎· to scroll to a name on the **Contact List**.

2 Press **SEND IM** to start a conversation with the person or press **View** to open a conversation in progress.

3 Press keypad keys to enter message text.

4 Press **SEND** to send the message.

Your phone displays the conversation history, where you can see the text you sent and the person's replies as they arrive. In the conversation display, you can:

- Press **BACK** to return to the **Contact List**, where you can open more conversations.
- Press ⏻ to return to the home screen, without logging out of IM or closing the conversation.

  Note: Your phone displays **New IM from:** if you receive a message while on the home screen or in another application.
- Press ☰ > **Contact Info** to view the screen name and online status of the person in this conversation.
- Press ☰ > **Add Contact** to add the screen name to your Contact List.
- Press ☰ > **End Conversation** to end the conversation.

  Note: If you log out of IM, you can still view the conversation text by pressing ☰ > **IM** > **Offline Convs.** from the home screen. Turning off your phone erases the conversations.

setting your online status

When you log in to IM, your online status is visible to other IM users. To set your online status:

1 Press ·ȯ· to scroll to **My Status**.

2 Press **Select** to select the option.

3 Press ·ȯ· to scroll to **Available**, **Busy** or **Invisible**.

4 Press **Select** to select the status setting.

setting up IM

adding and removing contacts

To add a name, open your **Contact List** or a conversation and press ☰ > **Add Contact**. If you are not in a conversation, enter the new screen name and press **OK**. IM returns an error if it cannot verify the name on the server.

To remove a name from your **Contact List**, highlight the name and press ☰ > **Delete Contact**.

setting your busy message

If you are logged in to IM but not responding to new messages, you can set the  (busy) indicator to display next to your name in everyone else's **Contact List**. From the **IM Online** menu, select **My Status** > **Busy**.

To create or edit a busy message that is automatically sent to IM users attempting to contact you, select **Busy Message** from the **IM Online** menu.

Note: The **IM Online** menu displays when you log in and when you press **BACK** from your **Contact List**.

setting your IM alert

IM can sound an alert when new messages arrive.

To turn the IM alert on or off, select **Settings** > **Set Sounds** from the **IM Online** menu.

logging out of IM

Select **Log Out** from the **IM Online** menu.

Note: The above introduction is for Custom IM. The AIM and ICQ will use a similar process.


basics

See page 1 for a basic phone diagram.

display

The *home screen* displays when you turn on the phone. To dial a number from the home screen, press the number keys and ⊙.

Note: Your home screen may look different from the one on this page, depending on your service provider.

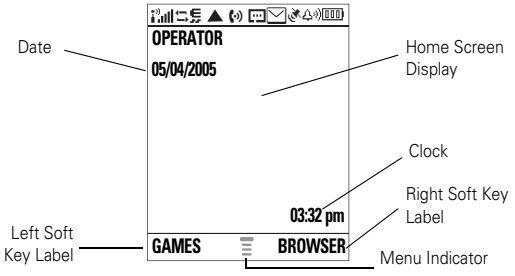


The *menu indicator* shows that you can press ☰ to open the menu. *Soft key* labels show the current soft key functions. For soft key locations, see page 1.

Press ·⊙· up, down, left or right to open basic menu features. You may select to show or hide home screen display icons.

Find it: Press ☰ > **Personalise** > **Home Screen** > **Home Keys** > **Icons**

Status indicators can display at the top of the home screen:

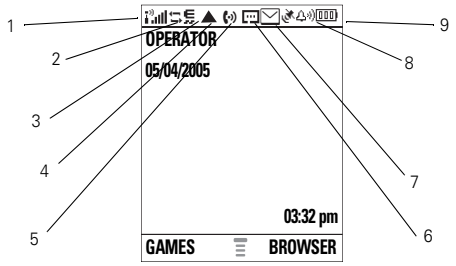

1 **Signal Strength Indicator** – Vertical bars show the strength of the network connection. You cannot make or receive calls when 📶 or 📶X displays.

2 **GPRS Indicator** – Shows when your phone is using a high-speed GPRS network connection. Indicators show PDP context active ☑ or packet data available 🖧.

3 **Data Indicator** – Shows connection status.

- 🔒 = secure packet data transfer
- ⇄ = unsecure packet data transfer
- 🔒 = secure application connection
- = unsecure application connection
- = secure *Circuit Switch Data* (CSD) call
- = unsecure CSD call

4 **Roam Indicator** – Shows when your phone is seeking or using a network outside of your home network. Indicator shows ▲.

5 **Active Line Indicator** – Shows 1 to indicate an active call or 1 to indicate when call forwarding is on. Indicators for dual phone lines (requires SIM card for 2 phone lines) can include:

- 1 = line 1 active
- 2 = line 2 active
- 1 = line 1 active, call forward on
- 2 = line 2 active, call forward on

6 **Messaging Presence Indicator** – Shows when Instant Messaging (IM) is active. Indicators can include:

- = online
- = new message

Note: The IM-related icons above are for Custom IM.

7 **Message Indicator** – Shows when you receive a new message. Indicators can include:

- = text message
- = voicemail message
- = voicemail & text message
- = active chat session


8 **Ring Style Indicator** – Shows the ring style setting.

- = loud ring
- = vibrate then ring
- = soft ring
- = silent
- = vibrate
- = vibrate & ring

9 **Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

menus


From the home screen, press ☰ to enter the main menu.

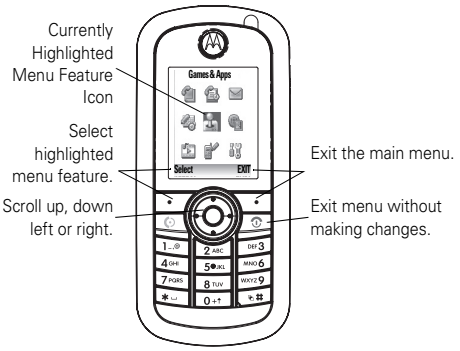

The following menu icons may be available, depending on your service provider and service subscription options.

menu features	
Phonebook	WebAccess
Recent Calls	Multimedia
Messages	Personalise
Office Tools	Settings
Games & Apps	Camera


Some features require you to select an option from a list:

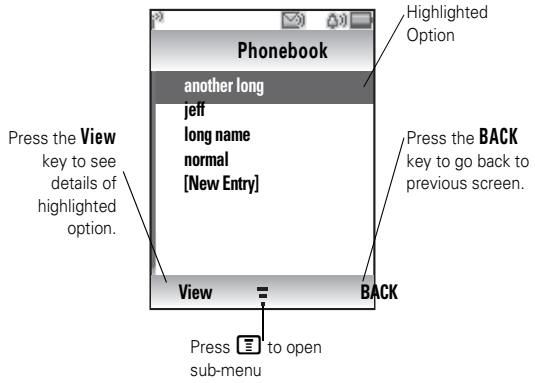

- Scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight an option.
- In an alphabetised list, press a key repeatedly to cycle through the letters and highlight the closest matching option on the list.
- When an option has a list of possible settings, scroll left or right to select the setting.
- When an option has a list of possible numeric values, press a number key to set the value.

text entry

Some features let you enter text.

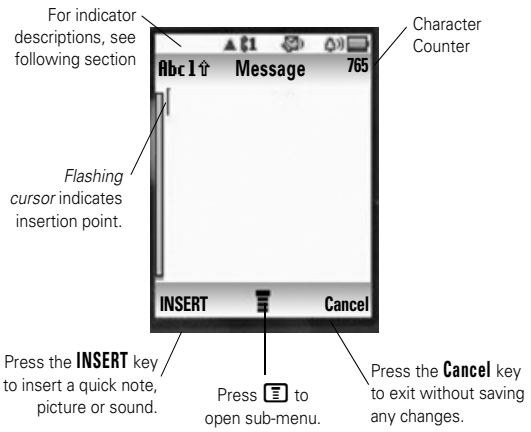

choosing a text entry method

Multiple text entry methods make it easy for you to enter names, numbers and messages. The method you select remains active until you select another method.

Press # in any text entry screen to select one of the following entry methods:

Primary	The primary text entry method (see below to set).
Numeric	Enter numbers only (see page 42).
Symbol	Enter symbols only (see page 42).
Secondary	The secondary text entry method (see below to set).


Alternatively, you can select a text entry method in any text entry screen by pressing > **Entry Mode**.

iTAP™ mode

Press # in a text entry screen to switch to iTAP mode. If you don't see 🕮 or 🕮, press > **Entry Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press 7 7 6 4, your phone displays:

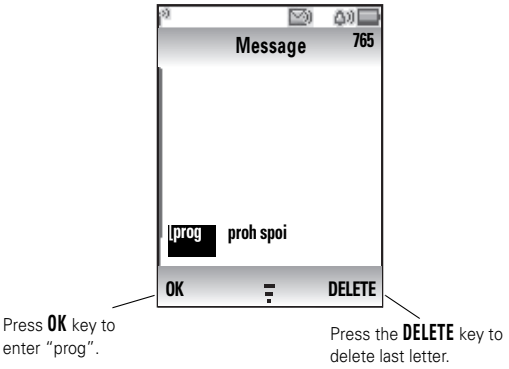


- If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.
- Press 1 to enter punctuation or other characters.

tap mode

Press # in a text entry screen to switch to tap mode. If you do not see 1 or 2, press > **Entry Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press 8 one time, your phone displays:

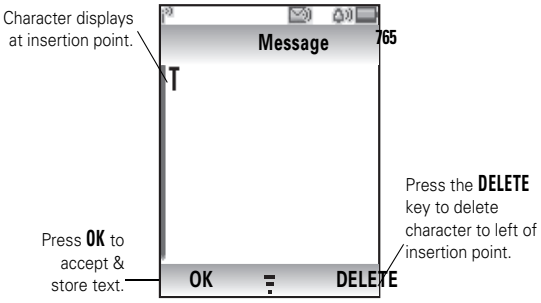

numeric mode

Press the number keys to enter the numbers you want.

symbol mode

Press a keypad key to show its symbols at the bottom of the display.

Highlight the symbol you want, then press the **Select** key.

volume

You can adjust the earpiece speaker volume while you are talking by pressing ·ö· right/up to increase the volume or left/down to decrease the volume.

Tip: During a call, you can set your phone to mute by pressing M > **Mute**.

If you forget your security code: If you forget your security code, SIM PIN code, PIN2 code or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the unlock code.

To **manually lock** your phone:
Press M > **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off:

Press M > **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 53). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

check battery meter

To check your battery meter:

Press M > **Settings** > **Phone Status** > **Battery Meter.**

navigation key

Press the *navigation key* ·ö· up, down, left or right to scroll and highlight options.



handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **SPKR ON** key to turn the handsfree speaker on. When your handsfree speaker is on, you can press the **SPKR OFF** key to turn it off.

Note: The handsfree speaker does not work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's **unlock code** is originally set to **1234**. The **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it: Press M > **Settings** > **Security** > **New Passwords**

You can also change your **SIM PIN** or call barring passwords.

If you forget your unlock code: At the **Enter Unlock Code:** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press M and enter your security code instead.

customise

ring style

Your phone rings and/or vibrates to notify you of an incoming call, message or other event. This ring and/or vibration is called an alert. You can select one of six different alert profiles: **Loud Ring**, **Soft Ring**, **Vibrate**, **Vibrate & Ring**, **Vibrate then Ring** and **Silent**.

= **Loud**	= **Vibrate**
= **Soft**	= **Silent**
= **Vibrate then Ring**	= **Vibrate and Ring**

The ring style profile's indicator displays at the top of your home screen. To choose your profile:

Find it: Press MENU > **Ring Style** > **Style** > *style name*

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it: Press MENU > **Settings** > **Ring Style** > **Details** > *desired event* > **Change** > *alert for event*

time & date

To set the time and date for your phone:

Find it: Press MENU > **Settings** > **Initial Setup** > **Time and Date**

Note: To choose an analog or digital clock for your home screen, press MENU > **Personalise** > **Home Screen** > **Clock Set**.

time, date, date format and NITZ setup

When you activate the *NITZ feature*, your phone's clock will automatically adjust to the correct time zone when you travel from one time zone to another.

Note: If your phone's clock does not adjust to the correct time zone, verify that the *NITZ feature* is activated and check with your service provider to ensure that the network supports this feature.

Find it: Press MENU > **Settings** > **Initial Setup** > **Time and Date**

wallpaper

You can set a photo, picture or animation as a wallpaper (background) image in your home screen.

Find it: Press MENU > **Personalise** > **Wallpaper**

Select one of the following options.

option	
Set Layout	Select **Centre** to centre the image in the display, **Tile** to repeat the image across the display, **Fit-to-screen** to fit the picture into display size.
Picture	Select an image for your wallpaper image.

screen saver

You can set a photo, picture or animation as a screen saver image. The screen saver displays when no activity is detected for a specified time.

Tip: This feature helps save your screen but not your battery. To extend battery life, turn off the screen saver.

Find it: Press MENU > **Personalise** > **Screen Saver**

display appearance

To choose the **colors** that your phone uses for indicators, highlights and soft key labels:

Press MENU > **Personalise** > **Colour Setting**.

To set your display **Contrast**:
Press MENU > **Settings** > **Initial Setup** > **Contrast**.

To set your display **Colour Setting**:
Press MENU > **Personalise** > **Colour Setting**.

To save battery life, the **Backlight** turns off when you are not using your phone. The backlight turns back on when you press any key. To set how long your phone waits before the backlight turns off:

Press ☰ > **Settings** > **Initial Setup** > **Backlight**.

answer options

You can use additional, alternative methods to answer an incoming call. To activate or deactivate an answer option:

Find it: Press ☰ > **Settings** > **In Call Setup** > **Answer Options**

option	
Multi-key On	Answer by pressing any key.
Multi-key Off	Answer by pressing ⊙.

personal greetings

You can create personal greetings that display when you turn on the phone:

Find it: Press ☰ > **Personalise** > **Greeting**

optional handsfree operation

A phone headset enables you to use your phone without using your hands.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Find it: Press ☰ > **Settings** > **Headset** > **Auto Answer** > *desired mode*

calls

This chapter describes features related to making and answering calls.

recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that did not connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press ⊙ from the home screen to see the **Dialled Calls** list.

Find it: Press ☰ > **Recent Calls**

1 Highlight **Received Calls** or **Dialled Calls**, then press the **Select** key.

2 Highlight a call. A ✓ next to a call means the call connected.

- To call the number, press ⊙.
- To see call details (like time and date), press the **View** key.
- To see the **Dialled Calls list**, press ☰. This menu can include:

option	
Store	Create a phonebook entry with the number in the **No.** field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID	Hide your caller ID for the next call.
Send Message	Deliver the message.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.

redial

1 Press ⊙ from the home screen to see the **Dialled Calls** list. Or press ☰ > **Recent Calls** > **Received Calls**, **Dialled Calls** or **NotePad**.

2 Highlight the entry you want to call, then press ⊙.

If you hear a busy signal and you see **Call Failed**, **Number Busy**, press ⊙ to redial the number.

return a call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls**, where **X** is the number of missed calls.

1 Press the **View** key to see the **Received Calls** list.

2 Highlight the call you want to return, then press ⊙.

notepad

Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. These digits can be the last phone number that you called or a phone number that you simply entered but did not call. These digits remain in the notepad even when you turn off the phone.

To call the number, create a phonebook entry or perform other operations with the number stored in the notepad:

Find it: Press ☰ > **Recent Calls** > **NotePad**

hold or mute a call

When you are on a call:

Press ☰ > **Hold** to put all active calls on hold.

Press ☰ > **Mute** to put all active calls on mute.

call waiting

When you're using your phone, you will hear an alert if you receive a second call. Press ⊙ to answer the new call.

- To switch between calls, press the **SWITCH** key.
- To connect the two calls, press the **LINK** key.
- To end the call on hold, press ☰ > **End Call On Hold**.

To turn the call waiting feature on or off:

Find it: Press ☰ > **Settings** > **In Call Setup** > **Call Waiting**

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your phonebook or **Incoming Call** when caller ID information isn't available.

To show or hide **your phone number** for the next outgoing call or for all calls:

Find it: Press ☰ > **Settings** > **In Call Setup** > **My Caller ID**

emergency calls

Your service provider programs one or more emergency phone numbers (such as 911) that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted. You can dial and call the emergency number even when your phone is locked, when you are prompted to enter a code or password.

Note: Emergency numbers vary by country. The preprogrammed emergency number(s) in your phone may not work in all locations. Sometimes an emergency call cannot be placed due to network, environmental or interference issues.

To call the emergency number at any time:

1 Press the keypad keys to dial the emergency number.

2 Press [OK] to call the emergency number.

international calls

If your phone service includes international dialing, press and hold [0] to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code, such as +[4][4] for the U.K., +[3][3] for France, etc. and phone number.

1-touch dial

To call phonebook entries 1 through 9, press and hold the 1-Touch Dial number for one second.

You can set 1-Touch Dial to call the entries in your phone's memory phonebook, your SIM card's phonebook or your **Fixed Dial** list:

Find it: Press [MENU] > **Settings** > **Initial Setup** > **1-Touch Dial** > **Phone**, **SIM** or **Fixed Dial**

Note: For more information on the Fixed Dial feature, see the Advanced Calling section on page 57.

You can call phonebook entries 1 through 9 with the push of a single key. The first nine numbers from the SIM card would be placed in the 1-Touch Dial locations of 1 through 9.

Press and hold the 1-Touch Dial number for 1 second.

Note: To change 1-Touch Dial numbers, go to **Phonebook** to change the **Speed No.**

Find it: Press [MENU] > **Phonebook,** highlight a phone entry, then [MENU] > **Edit** > **Speed No.**

voicemail

You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network – not on your phone. Contact your service provider for more details.

To store your voicemail number in your phone:

Find it: Press [MENU] > **Messages** > [MENU] > **Voicemail Setup**

When you receive a voicemail message, your phone displays **1 New Message** and a new voicemail indicator on the status pane. (Some networks only indicate when you have messages, whether they are new or not.) If users delete all voicemail messages, the voicemail indicator will disappear.

To listen to your voicemail messages:

Find it: Press [MENU] > **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you do not have a voicemail number stored, the phone guides you through storing a number.

inserting special characters into dialling sequences

You can insert special characters, as well as numbers, in a phone number.

option	
p (pause)	Your phone waits until the call connects before it dials the next digit(s) in the series.
w (wait)	Your phone waits until the call connects, then prompts you for confirmation before it dials the next digit(s).

You can add a pause or a wait while your call is dialling. To add a pause before the phone connects, press and hold [*]. When **p** appears, press it to add a pause. Or, if you are adding a wait, do not press **p**. The **w** will eventually appear and, when it does, press it to add a wait.

other features

advanced calling

feature	
conference call	After your first participant is connected, dial the next number, press OK and then press the **LINK** key.
attach a phone number	Dial an area code or prefix for a phonebook number, press MENU > **Attach Number**
speed dial	Speed dial a phonebook entry: Enter a speed dial number, press # and then OK. **Tip:** If you forget the speed dial number for a phonebook's entry, press MENU > **Phonebook**, highlight the desired entry and press the **View** key.
call forwarding	Set up or cancel call forwarding: MENU > **Settings** > **Call Divert**
call barring	Restrict outgoing or incoming calls: MENU > **Settings** > **Security** > **Call Barring**

feature	
change phone line	If you have a SIM card for dual phone lines, you can change your line to make and receive calls from your other phone number. MENU > **Settings** > **Phone Status** > **Active Line** The active line indicator shows which phone line is active (see page 36).
fixed dial	When you turn on fixed dialling, you can call only numbers stored in the fixed dial list. Turn fixed dialling on or off: MENU > **Settings** > **Security** > **Fixed Dial** Use the fixed dial list: MENU > **Office Tools** > **Dialling Services** > **Fixed Dial**
quick dial	Dial preprogrammed phone numbers: MENU > **Office Tools** > **Dialling Services** > **Quick Dial**
DTMF tones	Set to **Long DTMF** or **Short DTMF**: MENU > **Settings** > **Initial Setup** > **DTMF**

phonebook

feature	
add new entry	An entry stored on the SIM card stays on that SIM card. If you replace that card with another, you won't find the same entry. An entry stored on the phone stays on the phone. If you replace the SIM card with another, you will find the same entry. MENU > **Phonebook** > MENU > **New** > **Number** > **Store To** **Shortcut:** Enter a phone number in the home screen, then press the **STORE** key to create an entry for that number. **Tip:** Some people have more than one phone number. When creating a phonebook entry, select **MORE** to store another number for the same **Name**. **Note:** Your phone's memory limit is 100 entries. The SIM card's memory limit depends on your carrier's SIM card type (maximum 255 entries).

feature	
download ringtones	You can try this function by sending from one handset to another one: M > **Messages** > **Create** > **SMS/EMS** or **MMS** or **MMS Templates** > **Insert** > **Sound** The ringtone download is through EMS or MMS. When you receive the EMS and MMS from another party, you can retrieve the ring tone from EMS or MMS message. You can also send the ring tone by sending EMS or MMS.
dial number	Call a number stored in the phonebook: M > **Phonebook**, highlight the phonebook entry, press ⊙. **Shortcut:** In the phonebook, press a keypad key one or more times to jump to entries that begin with the letters on that key.
set category for entry	M > **Phonebook** > *entry* M > **Category** You can classify an entry into the following categories: **All**, **Business**, **Personal**, **General**, **VIPs** or a category you create.
set category view	M > **Phonebook** > *entry* M > **Category** You can view **All** entries or those in the predefined category such as **Business**, **Personal**, **General**, **VIPs** or a category you create.

feature	
search phonebook entry	Press a keypad key 1 or more times to jump to entries that begin with the key's letters. Press a second letter to jump to entries beginning with the two letters you entered. You can enter up to three letters. M > **Phonebook**
sort phonebook list	Set the order in which entries are listed: M > **Phonebook** > M > **Setup** > **Sorting** > *sort order*
copy phonebook entry	Copy a phonebook entry to the SIM card or from the SIM card to the phone: M > **Phonebook**, highlight the entry, press M > **Copy** > **Entries** > **To**
copy multiple entries	Copy multiple phonebook entries between the phone and SIM card: M > **Phonebook**, highlight one entry, press M > **Copy** > **Entries**, press the **CHANGE** key, highlight another entry, press the **ADD** key. Repeat as necessary, press the **DONE** key.

feature	
set a picture ID for phonebook entry	When receiving a call from a phone number stored on your phone or SIM card, the picture associated with that number is displayed. M > **Phonebook** > *entry*. M > **Edit** > **Picture**. **Note:** The **Picture** option is not available for entries stored in SIM cards.
set picture ID view	View your phonebook entries as a text list or with picture caller ID photos: M > **Phonebook** > *entry*. M > **Setup** > **View By** > **List View**.

messages

For basic multimedia message features, see page 25.

feature		
send text message	M > **Messages** > **Create** > **SMS/EMS**	
send multimedia message	M > **Messages** > **Create** > **MMS**	
send a quick note	M > **Messages** > **Quick Notes**	

feature		
send a multimedia template	Open a multimedia template with preloaded media: M > **Messages** > **Create** > **MMS Templates**	
read new message	Read a new text or multimedia message: Press the **READ** key when the **New Message** notification displays.	
read old messages	Read old messages: M > **Messages** > **Inbox** Press M to perform various operations on a message.	
read sent messages	Read messages that you sent: M > **Messages** > **Outbox** Sent messages are saved in the **Outbox**.	
edit old draft	Save the message that you are editing to the **Draft** folder for later editing: M > **Messages** > **Draft**	
browser messages	Read messages received by your browser: M > **Messages** > **Browser Msgs**	
info services	Read messages from subscription-based services: M > **Messages** > **Info Services**	

feature	
sending and receiving vCard	You can send the vCard by sending MMS with an attachment (vCard is the attachment). You can also receive vCard from another party through MMS with an attachment. You can save the received vCard by opening MMS with the vCard attachment. This function can be sent from one handset to another. M > **Messages** > **Create** > **MMS** or **MMS Templates** > **Insert** > **Attachment** > **[New Attachment]** > **vCard** > *contact*

instant messaging

feature		
log in	M > **Office Tools** > **IM** > **Log In**	
find others online	After you log in: Select **Contact List** to see a list of other users.	
start conversation	From your **Contact List**, highlight a name in **Online Contacts**, press the **SEND IM** key.	
open active conversation	From your **Contact List**, highlight a name in **Conversations**, press the **View** key.	
end conversation	From the conversation display: M > **End Conversation**	

log out	Select **Log Out** from the **IM Online** menu.

chat

feature		
start chat	M > **Office Tools** > **Chat** M > **New Chat**	
receive chat request	Press the **ACCEPT** key or the **IGNORE** key.	
end chat	During a chat session: M > **End Chat**	

personalising

feature	
language	Set menu language: M > **Settings** > **Initial Setup** > **Language**
scroll	Set the highlight bar to stop or wrap around in the menu lists: M > **Settings** > **Initial Setup** > **Scroll**
ring volume	M > **Settings** > **Ring Style** > *style* **Detail** > **Ring Volume**
keypad volume	M > **Settings** > **Ring Style** > *style* **Detail** > **Key Volume**
clock view	Display an analog or digital clock in the home screen: M > **Personalise** > **Home Screen** > **Clock Set**

feature	
menu view	Display the main menu as graphic icons or as a text-based list: M > **Personalise** > **Main Menu** > **View**
main menu	Reorder items in your phone's main menu: M > **Personalise** > **Main Menu** > **Reorder**
show/hide menu icons	Show or hide menu feature icons in the home screen: M > **Personalise** > **Home Screen** > **Home Keys** > **Icons**
change home keys	Change the functions for the soft keys and navigation key in the home screen: M > **Personalise** > **Home Screen** > **Home Keys**
shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold M. Use a shortcut: Press M, then press the shortcut number.
master reset	Reset all options **except** unlock code, security code and lifetime timer: M > **Settings** > **Initial Setup** > **Master Reset** **Note:** Before the master reset, you need to input your security code.

feature	
master clear	To reset all options to their factory settings and clear all user entries (such as downloaded wallpapers, main menu animation and sounds): **Warning:** This option erases all **information you have entered** (including phonebook entries) and **content you have downloaded**. Once you erase the information, it cannot be recovered. All options are reset back to their factory settings, **except** for the unlock code, security code and lifetime timer. M > **Settings** > **Initial Setup** > **Master Clear** To clear all information, you need to enter the **Security Code** (000000).

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time that you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider

.

feature	
call times	Display call timers: > **Recent Calls** > **Call Times**
in-call timer	Display time during a call: > **Settings** > **In Call Setup** > **In-Call Timer**
call cost	Display call cost trackers: > **Recent Calls** > **Call Cost**
call cost setup	Set a credit limit: > **Settings** > **In Call Setup** > **Call Cost Setup**

handsfree operation

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

feature	
speakerphone	Activate a connected external speakerphone during a call: Press the **SPKR ON** and **SPKR OFF** keys to turn the speakerphone on and off.
auto answer	Automatically answer calls when connected to a car kit or headset: > **Settings** > **Headset** > **Auto Answer**

network

feature	
network settings	Display network information and adjust network settings: > **Settings** > **Network**

personal organiser

feature	
set alarm	> **Office Tools** > **Alarm Clock**
turn off alarm	When an alarm displays: To turn off the alarm, press the **DISABLE** key. To set the alarm to ring later, press the **SNOOZE** key.
calculator	> **Office Tools** > **Calculator**
currency converter	> **Office Tools** > **Calculator** > **Exchange Rate** Enter exchange rate, press the **OK** key, enter amount and select > **Convert Currency**.
stop watch	> **Office Tools** > **Stop Watch** Press the **START** key to start counting the time, the **STOP** key to stop counting the time and press **RESET** to reset the stopwatch. **Note:** After **Stop Watch** is activated, you can press **SNAPSHOT** to keep track of elapsed time for later reference. After you stop the **Stop Watch**, view elapsed time snapshots by scrolling right or left through snapshot 1, 2, 3, etc.

security

feature	
SIM PIN	Lock or unlock the SIM card: > **Settings** > **Security** > **SIM PIN** **Caution:** If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.
phone lock	> **Settings** > **Security** > **Phone Lock** Select to lock the phone right now or enable/disable the **Automatic Lock**.

fun & games

feature	
manage pictures	Manage pictures and animations: > **Multimedia** > **Pictures**
manage sounds	Manage ring tones and music that you have downloaded or composed: > **Multimedia** > **Sounds**
start browser	> **WebAccess** > **Start Browser**
start games	> **Games & Apps** > *game*

specific absorption rate data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.05 W/kg.[1] As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.[2] In this case, the highest tested SAR value is 0.45 W/kg.[1]

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (`http://www.who.int/emf`) or Motorola, Inc. (`http://www.motorola.com/rfhealth`).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.